


Scissor machine

欢迎使用本产品，为了更好的发挥设备的性能，使用前请仔细阅读本说明书

Welcome to the use of this product, in order to better play the performance of the equipment, please read this instruction carefully before use

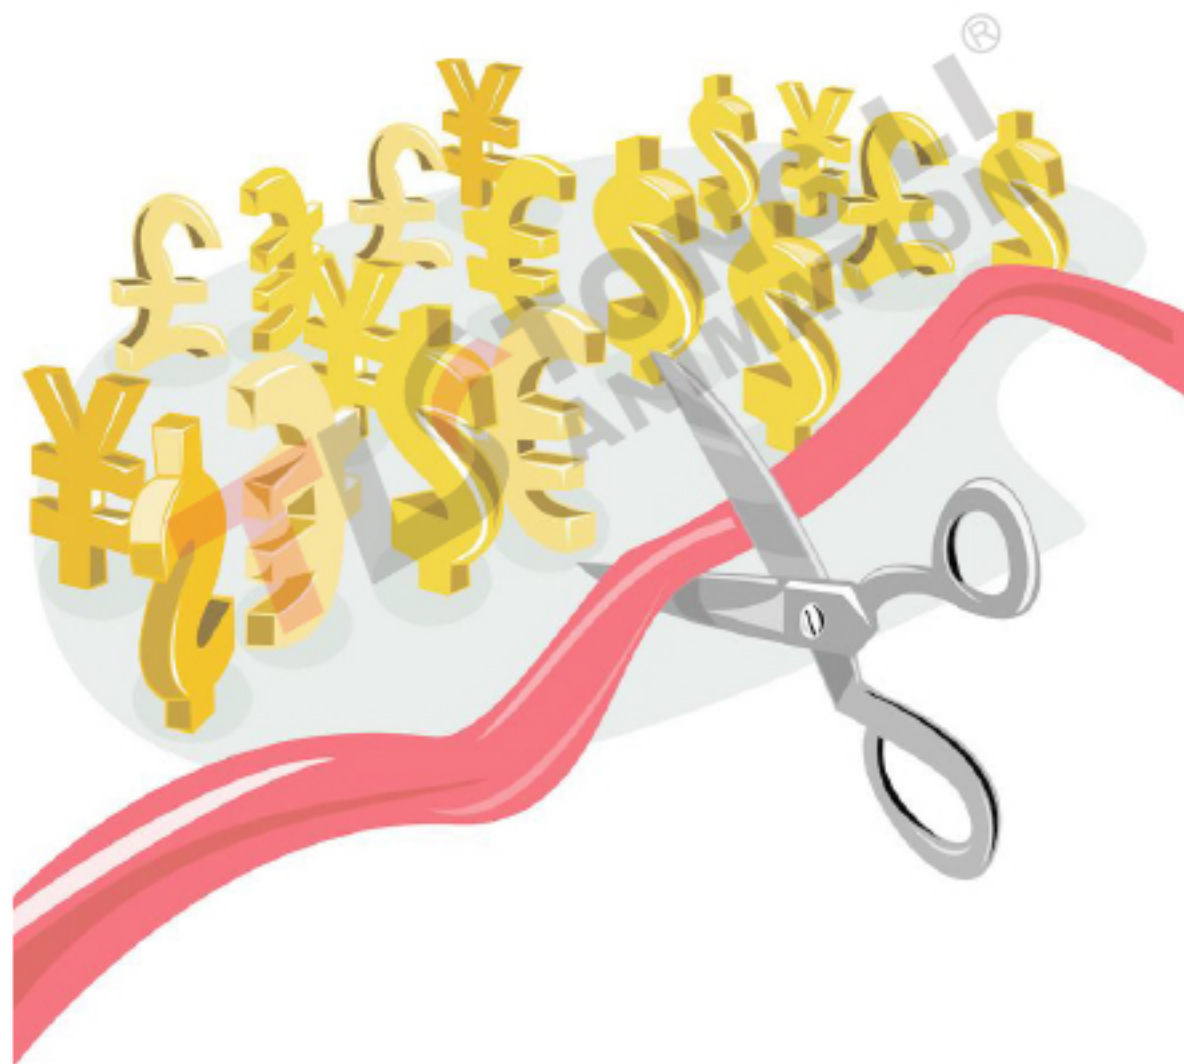

一、游戏玩法

投币至可游戏分数后，屏幕显示开始游戏，在游戏规定的时间内按住按键，剪刀向前行驶至礼品挂绳位置，看准时机松开按键剪刀剪断挂绳，礼品门弹开，玩家获得礼品。
温馨提示：屏幕显示等待补充礼物时，长按开始键5秒，礼品门弹开（可快速补充礼品）。

Gameplay

After coin-operating to the gameable score, the screen display starts the game, press and hold the button within the time specified by the game, the scissors move forward to the position of the gift lanyard, the timing is released, the button scissors cuts the lanyard, the gift door pops up, the player Get a gift.
Tips: When the screen displays waiting for a supplementary gift, press and hold the start button for 5 seconds, and the gift door pops up (you can quickly add gifts).

二、设置菜单

待机状态按小键盘的取消键进入菜单，屏幕显示如下：

1. 查看账目
2. 开 门
3. 高级设置
4. 测 试
5. 系统信息
6. 退 出

进入菜单选项后，使用键盘上下左右切换需要修改的选项及参数，按确认键保存。

setting menu

In the standby state, press the cancel button of the keypad to enter the menu.
The screen displays as follows:

1. TotalBill
2. OpenDoor
3. High Set
4. Sensor
5. Sys Info
6. Exit

After entering the menu options, use the keyboard to switch between the up and down and left and right options and parameters, and press the enter key to save.

1. 查看账目

* 合计帐目

总投币数：所有连线机台线上线下的总投币数。
游戏次数：所有连线机台总计游戏局数。
中奖次数：所有连线机台剪掉的礼品数。
购买次数：所有连线机台购买礼品次数。
现场投币：所有连线机台投入实物游戏币数。
手机投币：所有连线机台手机扫码的投币数。
购买收入：所有连线机台购买礼品的投币数。

* 分机帐目

总投币数：线上线下的总投币数。
游戏次数：游戏局数。
中奖次数：剪掉的礼品数。
上局出奖：最后一个礼品多少局被剪下/几率。
现场投币：投入实物游戏币数。
手机投币：手机扫码的投币数。
购买收入：购买礼品的投币数。
购买次数：购买礼品次数。

TotalBill

coin: The total number of coins in the online and offline of all connected machines.
Play: The total number of game stations for all connected machines.
WinCnt: The number of gifts cut off by all connected machines.
SellCnt: The number of times that all connected machines purchase gifts.
coin: All connected machines are invested in physical games.
NetCoin: The number of coins in the code scan of all connected mobile phones.
SellIn: The number of coins purchased by all connected machines.

SlaveBill

coin: The total number of coins in the line and offline.
Play: The number of games.
WinCnt: The number of gifts cut out.
OldWin: How many times the last gift was cut/probability.
coin: The amount of coins in the physical game.
NetCoin: The number of coins in the mobile phone scan code.
SellIn: The number of coins purchased for gifts.
SellCnt: The number of purchases of gifts.

2. 开门


打开礼品玻璃门。

OpenDoor

Open the gift glass door.

3. 高级设置

进入高级设置输入密码（初始密码 80000000），按确认键进入，屏幕显示如下：
游戏时间：每局游戏时间，以秒为单位，设置范围 20~60 秒，默认 60 秒。
几币一局：每局游戏投币值，范围 1~9 币，默认 1 币 1 局。
出奖几率：设置剪多少次出一个礼品，默认 10 次出一个（次/局）。
购买功能：设置礼品的售卖币数，范围 1~999 币，0 为关闭购买。
位置校正：机器出厂时剪刀位置已校正准确，请勿随意调整！同时按右+确定进入校正：使用键盘上下键控制剪刀前后移动，使剪刀口左侧塑料片最前端接近礼品挂绳（如图 2），按确认键保存，剪刀会再次返回至刚刚保存位置，此时须再次确认剪刀位置是否准确，准确则退出，不准确则重新校正。
位置校正后返回主菜单进入测试，测试时剪刀前后不能剪到绳子方为准确。

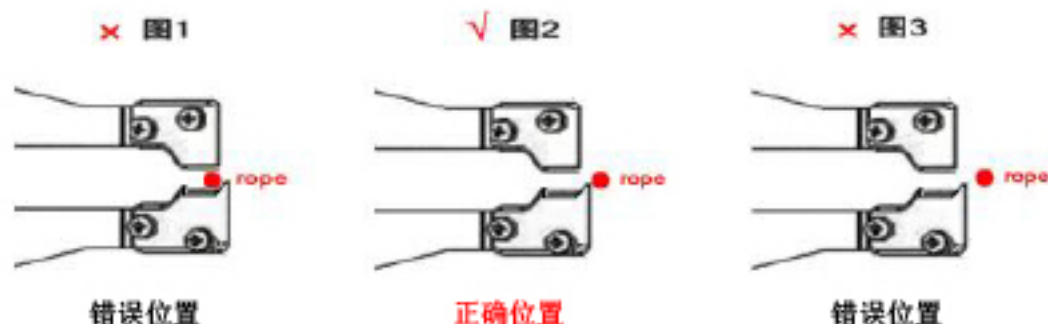

清除账目：所有账目清零。

修改密码：修改进入高级设置的密码，修改后新密码要“牢记”。

显示扫码：屏幕显示手机支付二维码。

High Set

Enter advanced settings and enter the password (initial password 80000000), press Enter to enter, the screen displays as follows:

TIME: The game time per game, in seconds, the setting range is 20 to 60 seconds, the default is 60 seconds.

CoinUnit: the value of each game's coin, ranging from 1 to 9 coins, the default is 1 coin 1 game.

OddsSet: Set how many times to cut out a gift, the default is 10 times (one time / bureau).


SellFunc: set the number of coins sold, ranging from 1 to 999 coins, 0 is closed for purchase.

Adjust: The position of the scissors has been corrected when the machine leaves the factory, please do not adjust it at will! Press right + OK to enter the correction at the same time:

Use the up and down keys of the keyboard to control the movement of the scissors back and forth, so that the front end of the plastic piece on the left side of the scissors opening is close to the gift lanyard (as shown in Figure 2). Press the Enter key to save, the scissors will return to the just saved position again. At this time, you must confirm the position of the scissors again. Accurate, accurate, and re-corrected if it is inaccurate.

After the position correction, return to the main menu to enter the test.

The scissors can not be cut to the rope before and after the test.

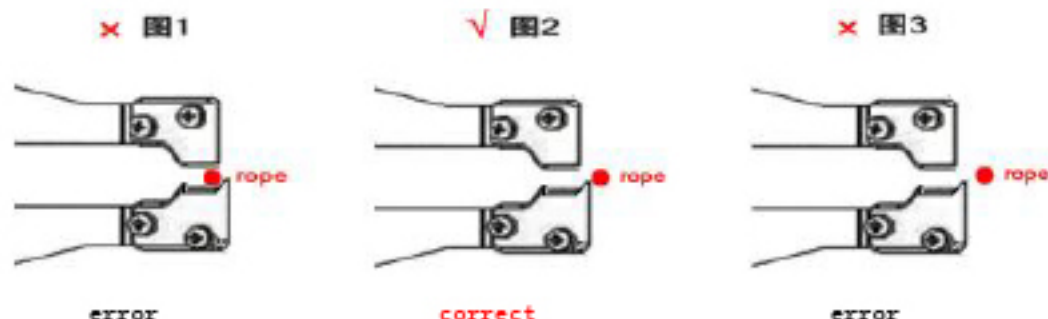

ClearBill: All accounts are cleared.

Password: Modify the password to enter the advanced settings. After the modification, the new password should be "keep in mind".

ShowQRCode: The screen displays the mobile phone payment QR code.

4. 测 试

模拟游戏时剪刀躲开绳子的距离以及机器各部件的故障与排除。

中奖信号：测试中奖开关是否正常。

投币信号：测试投币器是否正常。

前后复位：测试前后电机及复位光眼是否正常。

剪刀复位：测试剪刀电机及复位光眼是否正常。

声音测试：测试机台所有音效。

Sensor

The distance between the scissors to avoid the rope and the failure and elimination of various parts of the machine during the simulation of the game.

Winning sen: Test whether the winning switch is normal.

Coin sen: Test whether the coin acceptor is normal.

Rsty: Whether the motor and resetting eye are normal before and after the test.

Rsty: Test the scissors motor and reset the light eye is normal.

MusicTest: Test all sound effects of the machine.

5. 系统信息

乐摇摇在线状态。

台 号：机器 ID。

版 本：程序版本。

日 期：软件更新日期。

Sys Info

Music shakes online.

ID: Machine ID.

Ver: Program version.

DATE: The date the software was updated.

6. 退 出

退出菜单返回游戏界面。

Exit

Exit the menu and return to the game interface.

三、故障排除

1. 门被打开

解 决：礼品玻璃门未关闭。

2. 等待补充礼物

解 决：未挂入礼品或礼品重量太轻。

3. 投币器错误

解 决：检查投币器开关是否拨至常开位置。

4. 前后复位错误

解 决: (1) 关机重启, 天车自助复位。

(2) 如果剪刀前后行驶不停止, 检查复位光眼是否变形或线路插头是否松动。

5. 剪刀复位错误

解 决: (1) 关机重启, 剪刀自助复位。

(2) 如果重启无法恢复, 在了解故障后请联系厂家技术人员协助解决。

Troubleshooting

Err Code: 2 Door is Open

Solution: Gift glass door is not closed

Err Code: 7 No present

Solution: The weight of the gift or gift that is not attached is too light.

Err Code: 15 coin err

Solution: Check if the coin acceptor switch is pulled to the normally open position.

Err Code: 5 Y reset err

Solution: (1) Shutdown and restart, the crane is self-reset.

(2) If the scissors do not stop before and after, check if the resetting eye is deformed or the line plug is loose.

Err Code: 6 Z reset err

Solution: (1) Shutdown restart, scissors self-reset.

(2) If the restart cannot be recovered, please contact the manufacturer's technical personnel for assistance after understanding the fault.

四、软件升级

升级方法: 关机, 将 SD 卡插入主板的 SD 卡座, 使用螺丝刀将 P11 (查看主板 I/O 示意图) 两个针脚短接在一起; 开机, 主板指示灯 D1 快速闪烁, 灯不闪升级结束; 关机, 拔出 SD 卡和螺丝刀; 开机即可正常游戏。

查看是否升级成功, 按小键盘取消键进入菜单/系统信息/版本 (V.xxx 为程序版本)。

software upgrade

Upgrade method: Shut down, insert the SD card into the SD card holder of the motherboard, use a screwdriver to short the two pins of P11 (view the motherboard I/O schematic); when booting, the main board indicator D1 flashes rapidly, the light does not flash and the upgrade ends; Shut down, pull out the SD card and screwdriver; boot to normal game.

To check whether the upgrade is successful, press the keypad cancel button to enter the menu/system information/version (V.xxx is the program version).