

# MEOW MEOW HOUSE



## User Guide

Remark: Photos are for your reference only,  
please regard the actual product as the truth.



### Warning

- Please read **this** user guide carefully before operation to ensure **the safe** operation of this machine.
- Please **keep** this user guide in order to check when you need in the **future**.
- The machine **frame** and components are subject to change without further notice.

## DIRECTORY

|                                                                         |     |
|-------------------------------------------------------------------------|-----|
| CHAPTER 1 OPERATION.....                                                | P02 |
| SECTION 1 HOW TO PLAY.....                                              | P02 |
| SECTION 2 GAME RULES .....                                              | P02 |
| SECTION 3 MACHINE FUNCTION ADJUSTMENT SETTING<br>(DIP SW SETTING) ..... | P03 |
| CHAPTER 2 SETTING.....                                                  | P05 |
| SECTION 1 CLAW POWER ADJUSTMENT.....                                    | P05 |
| SECTION 2 MACHINE FUNCTION SETTING.....                                 | P06 |
| CHAPTER 3 TROUBLE-SHOOTING.....                                         | P09 |
| SECTION 1 TROUBLE-SHOOTING.....                                         | P09 |
| SECTION 2 ERROR DESCRIPTION AND SOLUTIONS.....                          | P11 |
| CHAPTER 4 WIRING DIAGRAM.....                                           | P12 |
| SECTION 1 MAINBOARD W170921.....                                        | P12 |
| CHAPTER 5 LCDPTER 5 LCD DISPLAY WIRING DIAGRAM.....                     | P14 |
| MAINTENANCE.....                                                        | P15 |

# CHAPTER 1 OPERATION

## SECTION 1 HOW TO PLAY

1. Insert coins into coin slot, the music will be changed from demo music to game play music.
2. Use joystick to move claws above your selected object. When you move the joystick, the game time is countdown, and the light of [DESCEND] button is flashing.
3. Once you press [DESCEND] button or time's up (game play time is adjustable), the crane drives motor to lower down claws and then catch object.
4. If 'Catch in air' function is available, press [DESCEND] button again and the claws can catch item in the air.
5. After movement of catching, the claws rise up till it touches stop uping, then the claws move to exit area and release.

## SECTION 2 GAME RULES


### ITEM 1 DEMO STANDBY

Demo music is keeping playing for 2 minutes every 3 minutes when the machine is standby. (Demo music is also able to be closed.)

### ITEM 2 COINS IN

1. Coins v.s. plays by DIP SW setting.
2. If COIN pulse speed was lower than 10mms, the machine can't recognize the signal.
3. If the speed of inserting coin was over 150mms, the machine shows error code.
4. The machine will have sound effect of receiving coins when you insert coin. The counter of coin acceptor will add up. The cumulative unit is based on number of PLUSE which coin acceptor sends to the mainboard.
5. Display of inserting coins:  
If the setting is 1 coin 1 point, the displayer on control plate will accumulate 1.  
If the setting is 2 coins 1 point, the displayer will accumulate 1 after inserting 2 coins.  
When you insert the first coin, the game machine can only have sound effect, the counter of coin acceptor will accumulate it, but the displayer on control plate will not accumulate it till then the player inserts the second coin.

For example: 2 coins 1 play

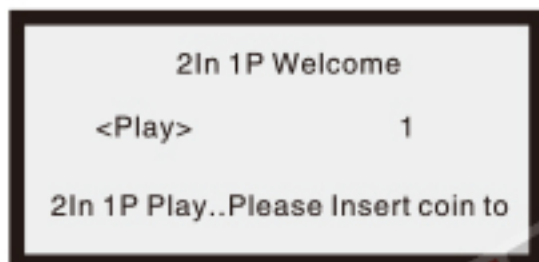

6. Insert coins cumulative function: The 2 pcs coin acceptors in the machine is the same currency value, when setting from 'multiple coins play multiple times' to 'multiple coins play 1 time', the coins will be inserted to different coin acceptor, then the coins will accumulate each other. For example: If the currency value is 10RMB for 2 coin acceptors, and the program has been set to '2 coins play 1 time', if the player only have 2pcs 10RMB coins, he inserts to different coin acceptor, these 2pcs coin acceptor value will be accumulated each other to be 2 coins, so only play 1 time.

# CHAPTER 1 OPERATION

## ITEM 3 SHAKING MACHINE TEST

1. When a tilt is installed in machine, it plays 'Don't shake the machine' when players shake the machine.
2. When the claw arms are closing, the arms will open and move back to the home position when players shake the machine.

## ITEM 4 SERVICE button

1. When standby, press [SERVICE] button to play free game, the number at "Score" display flashes and if player catch item, the prize meter will display the record of working.
2. Player can insert coin at free game status, the normal game can play till free game is over.
3. When press [SERVICE] button to play free game, only play 1 time, player should press [SERVICE] again to play free game after game is over.

## SECTION 3 MACHINE FUNCTION ADJUSTMENT SETTING(DIP SW Setting)

| DIP SW1                     |                  | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   |
|-----------------------------|------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| Demo Music                  | Open             | ON  |     |     |     |     |     |     |     |
|                             | Close            | OFF |     |     |     |     |     |     |     |
| Standby                     | Fixed Adjustment |     | OFF |     |     |     |     |     |     |
| Random Super Power One Time | ON               |     |     | ON  |     |     |     |     |     |
|                             | OFF              |     |     | OFF |     |     |     |     |     |
| Claw Swing Prevention       | ON               |     |     |     | ON  |     |     |     |     |
|                             | OFF              |     |     |     | OFF |     |     |     |     |
| Credit Save                 | ON               |     |     |     |     | ON  |     |     |     |
|                             | OFF              |     |     |     |     | OFF |     |     |     |
| Playin Save                 | ON               |     |     |     |     |     | ON  |     |     |
|                             | OFF              |     |     |     |     |     | OFF |     |     |
| Air Catching object         | ON               |     |     |     |     |     |     | ON  |     |
|                             | OFF              |     |     |     |     |     |     | OFF |     |
| Free Play                   | ON               |     |     |     |     |     |     |     | ON  |
|                             | OFF              |     |     |     |     |     |     |     | OFF |

| DIP SW2           |                              | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   |
|-------------------|------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| Standby           | Fixed adjustment             | OFF |     |     |     |     |     |     |     |
| Game Mode         | Mode 4                       |     | ON  | ON  |     |     |     |     |     |
|                   | Mode 3                       |     | OFF | ON  |     |     |     |     |     |
|                   | Mode 2                       |     | ON  | OFF |     |     |     |     |     |
| Claw Descen Delay | Mode 1                       |     | OFF | OFF |     |     |     |     |     |
|                   | Random(0.4,0.8,1.2, 1.6 sec) |     |     |     | ON  |     |     |     |     |
| Up-stop Delay     | OFF                          |     |     |     | OFF |     |     |     |     |
|                   | 0.6 Sec                      |     |     |     |     | ON  | ON  |     |     |
|                   | 0.4 Sec                      |     |     |     |     | OFF | ON  |     |     |
|                   | 0.2 Sec                      |     |     |     |     | ON  | OFF |     |     |
| Prize-out         | OFF                          |     |     |     |     | OFF | OFF |     |     |
|                   | Right Front                  |     |     |     |     |     |     | ON  | ON  |
|                   | Right Back                   |     |     |     |     |     |     | OFF | ON  |
|                   | Left Front                   |     |     |     |     |     |     | ON  | OFF |
|                   | Left Back                    |     |     |     |     |     |     | OFF | OFF |

# CHAPTER 1 OPERATION

## Game Modes:

### Mode 1 (Normal)

1. The super power can be preset. When the number reaches to the preset value, there will be a super power, and no matter whether the toy is caught or not, it will start a new round again.
2. If the value of coin is not equal to the actual price of toy, the winning proportion will be recalculated.

### Mode 2 (Give super power when no winning and renew.)

1. When the number reaches to the certain value of super power, if you keep inserting the coins, the machine will keep the powerful claw till you get the prize. After winning the prize, it will start a new round again
2. If the machine is in the standby mode, the number will be kept and accumulated when new players participate in this game.
3. This function can be adjusted.
4. If the value of coin is not equal to the actual price of toy, the winning proportion will be recalculated.

### Mode 3 (Vending Mode)

1. When the number reaches to the certain value of super power, there is no need to insert the coin anymore, and the machine will keep the powerful claw till you get the prize. After winning the prize, it will start a new round again.
2. In this mode, the LCD board shows the credits, the accumulated play times (Shown in terms of the number of coins), the preset winning play times (Shown in terms of the number of coins)
3. When the play times reaches to the winning play times, the accumulated play times will be clear and start a new round again.

### Mode 4

1. In this mode, players need to insert the certain number of coins at one time. When coin number reaches to the super power amount, there is no need to insert coins anymore, and players can keep playing till get the prize. After winning the prize, it will start a new round.
2. In this mode, the LCD board shows the credits, the accumulated play times (Shown in terms of the number of coins), the preset winning play times (Shown in terms of the number of coins)
3. When the play times reaches to the winning play times, the accumulated play times will be clear and start a new round again.

|                                    |   |
|------------------------------------|---|
| 2In 1P Welcome                     |   |
| <Play>                             | 1 |
| 2In 1P Play..Please Insert coin to |   |

Display in Mode 1 and 2

|                                    |    |
|------------------------------------|----|
| 2In 1P Play..Please Insert coin to |    |
| <Play>                             | 1  |
| <Acc>                              | 0  |
| <Price>                            | 20 |

Display in Mode 3 and 4


## CHAPTER 2 SETTING

### SECTION 1 CLAW POWER ADJUSTMENT

Method 1:

Adjust COIN 1 to N.C. then power on the machine. The display board shows [1.claw power voltage setting], this means ready to proceed with setting ups.

Coin 1 to N.C

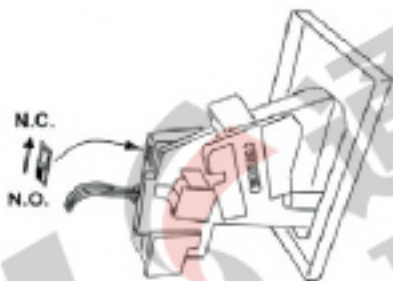

In Setting

>:Exit

F/+.<> B/-.

Dorp..In Set

Method 1:

Press [TESTING] to power on the machine till the display board shows [SETTING], release the button and show [0] setting option, choose first option and enter claw power testing and setting. Then the LCD display [1.claw power voltage setting], press [DESCEND] and setting.

>:Power Set

>:C1=

F/+.<> B/-.

Dorp..In Set

Remark: (After finishing the claw power setting, please press [SERVICE] and exit, then continue other settings)

Hold joystick forward and back to choose C1–A5, press [DESCEND] to entry setting, then hold joystick right and left to adjust voltage value.

1. Point to C1, press [DESCEND] button into setting, the claw closed. The display panel shows voltage C1=40V, move joystick left and right to adjust voltage value (range: 0–48V). (C1 is the voltage value from close claw up to before stop)

Example:

>:Power Set

>:C1=40

R/+.<> L/-.

Dorp..Exit

2. Point to C1, press [DESCEND] button into setting, the claw closed. The display panel shows voltage C2=15V, move joystick left and right to adjust voltage value (range: 0–48V). (C2 is the voltage value from close claw up to the crown block)

Example:

>:Power Set

>:C2=15

R/+.<> L/-.

Dorp..Exit

## CHAPTER 2 SETTING

3. Point to C3, press [DESCEND] button into setting, the claw closed. The display panel shows voltage C3=20V, move joystick left and right to adjust voltage value (range: 0-48V). (C3 is the voltage value from close claw up to stop and return to the exit)

Example:

```
>:Power Set  
>:C3=20  
R/+.<> L/-.  
Dorp..Exit
```

4. Point to C4, press [DESCEND] button into setting, the claw closed. The display panel shows voltage C4=48V (大力爪), move joystick left and right to adjust voltage value (range: 0-48V). (C4 is the voltage value of supper power claw)

Example:

```
>:Power Set  
>:C4=48  
R/+.<> L/-.  
Dorp..Exit
```

5. Point to A5, press [DESCEND] button. The display panel shows claw power=00, then move the joystick into demo game. Press control button, the crane starts demo game, the display panel shows claw power=40V, claw power=15V, claw power=20V (40V, 15V, 20V means the preset voltage value of C1, C2 and C3).

Example:

```
>:Power Set  
>:A5=Power test  
F/+.<> B/-.  
Dorp..In Set
```

## SECTION 2 MACHINE FUNCTION SETTING

Enter in the TEST mode:

-- Hold [SERVER] SW while powering on the machine. The LCD display shows SETTING. Release from the [SERVER] SW, the LCD display will show [00], which means you are now in the TEST mode. Move the joystick forward or backward to select the testing items, Press [DESCEND] button to enter. The test items are shown as the following table. If quit test mode, just press [SERVER] SW to quit the items. Release [SERVER] test SW, the display is shown as below:



## CHAPTER 2 SETTING

### Test items

| Item | Description           | Introductions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0    | Quit                  | Press [DESCEND] button to quit test mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 1    | Claw power test       | Same as previous section 'CLAW POWER ADJUSTMENT'                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 2    | Crane test            | <p>The display panel shows as pictured at right. Move the joystick to control the crane, keep press [DESCEND] button and move the joystick downward at the same time, the claw will lower down. Keep press [DESCEND] button and move the joystick upward at the same time, the claw will rises up.</p> <div>           &gt;:Gantry Test<br/>           F/R/B/L..Move<br/>           Dorp+F/Up.....<br/>           Dorp+B/Down...         </div>                                                                                              |
| 3    | Display panel         | <p>LCD Screen Testing<br/>After entering, LCD shows[ *], check if all characters are correct and no missing</p> <div>           In Setting<br/>           &gt;:Lcm Test<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div> <div>           *****<br/>           *****<br/>           *****<br/>           *****         </div>                                                                                                                                                                                      |
| 4    | DIP SW                | <p>DIPSW Testing(pictured at right)<br/>Adjust PCB DIP SW<br/>When switch it to ON, shown as [O]<br/>When switch it to OFF, shown as [X]<br/>DI POSW1 mean PCB Sw1<br/>DI POSW2 mean PCB Sw2<br/>Pictured at right means the first Pin of PCB SW1 is ON.</p> <div>           In Setting<br/>           &gt;:Dipsw Test<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div> <div>           DIPSW1<br/>           XXX0XXXX<br/>           DIPSW2<br/>           X0XXXXXX         </div>                               |
| 5    | Music,Effects         | <p>Test number of sentences 01-12</p> <div>           In Setting<br/>           &gt;:Music Test<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div>                                                                                                                                                                                                                                                                                                                                                                  |
| 6    | Crane auto test       | <p>Crane automatic test,reboot to quit.</p> <div>           In Setting<br/>           &gt;:Music Test<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div>                                                                                                                                                                                                                                                                                                                                                            |
| 7    | Coin insert setting   | <p>Shown as picture:<br/>Setting the amount of coins for each playing<br/>Move the joystick forward to set the single digits of coin amount<br/>Move the joystick left to set the ten digits of coin amount<br/>Range: 1-99<br/>Press [DESCEND] to save and exit</p> <div>           In Setting<br/>           &gt;:Coin IN Set<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div> <div>           In Setting<br/>           Now 0 2 In<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..Exit         </div>   |
| 8    | Playing Times Setting | <p>Shown as picture:<br/>Setting the playing times of each game<br/>Move the joystick forward to set the single digits of playing times<br/>Move the joystick left to set the ten digits of playing times<br/>Range: 1-99<br/>Press [DESCEND] to save and exit</p> <div>           In Setting<br/>           &gt;:Coin Play Set<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..In Set         </div> <div>           In Setting<br/>           Now 0 1 Play<br/>           F/+.&lt;&gt; B/-.<br/>           Dorp..Exit         </div> |

## CHAPTER 2 SETTING

| Item | Description                                                      | Introductions®                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9    | Adjusting times of super power                                   | <p>Shown as picture:<br/>After entering, the single digits value is flashing<br/>Move the joystick upward to add value<br/>Move the joystick downward to decrease value<br/>Move the joystick left to set single digits, ten and hundred.<br/>Example: Adjust times of super power is 135<br/>1. The flashing value of single digits is 0, move the joystick upward to add and stop at 5.<br/>2. Move the joystick left to set ten digits, number 1 is flashing, move the joystick upward to add and stop at 3.<br/>3. Move the joystick left to set hundred digits, number 0 is flashing, move the joystick upward to add and stop at 1.<br/>4. Finish setting, press [DESCEND] to save and exit.<br/>5. Range: 1-999, default value is 10.</p> <div>In Setting<br/>&gt;:Plays Per Win<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div> <div>&gt;:Plays Per Win<br/>&lt;Now&gt; 0 1 0<br/>F/+.&lt;&gt; B/-..L/Move<br/>Dorp..Exit</div> |
| 10   | Game time(sec)                                                   | <p>Move joystick to forward which is can plus numbers,move joystick to back which is can reduce numbers,descend button is confirm to quit.(Default values is 60 sec after returning to zero range is 10-90 sec.)</p> <div>In Setting<br/>&gt;:Game Time Set<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 11   | Adjusting speed of motor for front & back,left & right,up & down | <p>After entry, the display panel shown as right<br/>1. Front and back motor speed adjustment<br/>2. Left and right motor speed adjustment<br/>3. Upward and downward motor speed adjustment<br/>4. Move the joystick upward to adjust value<br/>5. Four values available for adjustment<br/>00: Default value, the fastest speed<br/>01: Fast speed<br/>02: Normal speed<br/>03: Slow speed<br/>04: Slowest speed<br/>Remark: Default value is 00, fastest speed is not</p> <div>In Setting<br/>&gt;:Motor Speed<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div> <div>&gt;:Motor Speed<br/>R.L Speed=<br/>F/..Select&lt;&gt;<br/>Dorp..In Set</div>                                                                                                                                                                                                                                                                                    |
| 14   | Choosing gift and selling interval time adjustment (sec)         | <p>Move joystick to forward which is can plus numbers,move joystick to back which is can reduce numbers,descend button is confirm to quit.(Default values is 90 sec after returning to zero,range is 1-90 sec)</p> <div>&gt;:Mode1 Time Set<br/>90 s<br/>F/+.&lt;&gt; B/-.<br/>Dorp..Exit</div> <div>In Setting<br/>&gt;:Mode1 Time Set<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 18   | Claw despoiling length adjustment                                | <p>The claw despoiling length,joystick-forward and back can adjust value,press descend button whenn you finish adjusting,can test length,stop after the length is enough,and press descend button for winding up.(Default values is 18 after returning to zero,range is 1-99.)</p> <div>In Setting<br/>&gt;:Length Set<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div> <div>&gt;:Length Set<br/>023<br/>F/+.&lt;&gt; B/-.<br/>Dorp..Test</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 21   | RAM return to Zero                                               | <p>After perss descend button,display panel shows default value,and then reboot,and sweep away all information,all setting return to default value.</p> <div>In Setting<br/>&gt;:Default Value<br/>F/+.&lt;&gt; B/-.<br/>Dorp..In Set</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## CHAPTER 3 TROUBLE-SHOOTING

### SECTION 1 TROUBLE-SHOOTING

| Items      | Description                                                                                                                   | Check and Solving                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coin in    | When the insert coin in the coin acceptor, machine make a sound to reminder, and displayer shows the point, but can not play. | <ol style="list-style-type: none"> <li>1. Please check the coin in mode whether is Coins v.s. Plays, set values is changed, please modify your required set values.</li> <li>2. If can not modify, it's possible the main board is error, please send the main board back to our company for fixing.</li> </ol>                                                                                                                                                                                                            |
|            | Coin/token can not insert                                                                                                     | <p>Comparison expression coins acceptor:</p> <ol style="list-style-type: none"> <li>1. Please check the sample coin from coin acceptor.</li> <li>2. Adjust the sensitivity and loose it.</li> <li>3. Check the PIN, whether DC 12V is input correctly.</li> <li>4. Coin acceptor error.</li> </ol> <p>Multi-coin coin acceptor:</p> <ol style="list-style-type: none"> <li>1. Sampling memory is error, please reset it follow the manual.</li> <li>2. Please Check the PIN, whether DC 12V is input correctly.</li> </ol> |
| Claw power | Claw return to exit after closing, but cannot closing after open.                                                             | <ol style="list-style-type: none"> <li>1. Claw power voltage of C3 is too low, please adjust to higher base on the goods' size and weight.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                      |
|            | Claw is closing once machine start                                                                                            | <ol style="list-style-type: none"> <li>1. The coil maybe short out, please change it.</li> <li>2. Main board is broken.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                         |
|            | Claw can not close                                                                                                            | <ol style="list-style-type: none"> <li>1. Please check the coiling of claw whether is fall off.</li> <li>2. Main board is broken.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                               |
| Crane      | Claw can not return to home position                                                                                          | <ol style="list-style-type: none"> <li>1. Power off and reboot the machine, if the trouble is still, please check stop-back SW or stop-left SW, it's possible SW is stuck, hear whether is click, and check line whether is fall off.</li> <li>2. Check if the air-plug of crane set is connect well?</li> <li>3. Main board is broken.</li> </ol>                                                                                                                                                                         |
|            | Can not move to forward or back by joystick operation                                                                         | <ol style="list-style-type: none"> <li>1. Front SW and Back SW of joystick whether is error or line whether is fall out.</li> <li>2. Check J5 of P.C.B whether is connect well.</li> <li>3. Stop-forward SW or stop-back SW of crane whether is broken or stuck.</li> <li>4. Front and back motor is broken or line fall out, the gear is not mesh.</li> <li>5. Check J9 of P.C.B whether is connect well.</li> <li>6. The connector between crane and the machine whether is normal.</li> </ol>                           |
|            | Can not move to left or right by joystick operation                                                                           | <ol style="list-style-type: none"> <li>1. Left and right SW of joystick whether is error or line whether is fall out.</li> <li>2. Check j5 of P.C.B whether is connect well.</li> <li>3. Stop-Left SW of crane whether is broken or stuck.</li> <li>4. Front and back motor is broken or line fall out the gear is not mesh.</li> <li>5. Check j9 of P.C.B whether is connect well.</li> <li>6. THE connector between crane and the machine whether is normal.</li> </ol>                                                  |

## CHAPTER 3 TROUBLE-SHOOTING

| Items           | Description                                                                                                                       | Check and Solving                                                                                                                                                                                                                                                                                                                                                      |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Claw descending | Can not descend after pressing button,it will auto to descend after the game time is over.                                        | <ol style="list-style-type: none"> <li>1 .Check [Descend]button is normal or not.</li> <li>2.[Descend] button wire is connected well or not.</li> <li>3.Check the JS of P.C.B whether is connect well.</li> </ol>                                                                                                                                                      |
|                 | [ Descend ] button is in normal status,but can not lower down.                                                                    | <ol style="list-style-type: none"> <li>1. Check the wire of up-motor and down-motor is well connected</li> <li>2.Check the motor of up and down whether is broken or the gear meshing whether is normal.</li> <li>3.Check the coiling is normal or not.</li> <li>4.Check the Jg PIN of P.C.B is connect crane well or not.</li> <li>5.Main board is broken.</li> </ol> |
|                 | After pressing [Descend]button, claw can not lower down or only lower down a bit,also the claw close and return to home position. | <ol style="list-style-type: none"> <li>1.Check the reel is entangled or not.</li> <li>2.Stop-down SW whether is easy to affect or broken.</li> </ol>                                                                                                                                                                                                                   |
|                 | Press [Descend],claw return to home position without reaching to the gifts.                                                       | <ol style="list-style-type: none"> <li>1.Check coiling whether is too short.</li> <li>2.Check reel is entangled or not.</li> <li>3.Stop-down SW whether is easy to trigger or broken.</li> </ol>                                                                                                                                                                       |
| Claw fetching   | When return to exit,can not open claw after fetching                                                                              | <ol style="list-style-type: none"> <li>1.Check stop-back and stop-left whether is broken or the line is fall off or not.</li> </ol>                                                                                                                                                                                                                                    |
|                 | After fetching,the crane return to home position while claw can not rise up.                                                      | <ol style="list-style-type: none"> <li>1.Check stop-up SW whether has been triggered or not.</li> <li>2.Stop-up SW whether is broken or fall out.</li> <li>3.Main board is broken.</li> </ol>                                                                                                                                                                          |
|                 | After fetching,the crane stops moving while claw can not rise up.                                                                 | <ol style="list-style-type: none"> <li>1.Check the motor of up and down whether is broken or line is fall out.</li> <li>2. Stop-up SW whether is broken or fall out.</li> <li>3. Main board is broken.</li> </ol>                                                                                                                                                      |

## CHAPTER 3 WIRING DIAGRAM


### SECTION 2 ERROR DESCRIPTION AND SOLUTIONS

| Description                                                    | Checking time                                         | Solutions                                                                                                                                                                                                                                                   |
|----------------------------------------------------------------|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Paying out error or motor of up and down error                 | 1.When machine start<br>2.When playing<br>3.Auto demo | 1.When the crane takes up claw, check if the stop-down SW is loose.<br>2.Check if stop-up SW is working well.<br>3.Check if the air-plug of crane set is well connected.<br>4.Check if the up-motor and down-motor are working well.<br>5.Mainboard error.  |
| Take-up error or motor of up and down error                    | When auto demo                                        | 1. When the crane takes up claw, check if the stop-up SW is loose.<br>2. Check if stop-up SW is working well.<br>3. Check if the air-plug of crane set is well connected.<br>4. Check if the up-motor or down-motor is working well.<br>5. Mainboard error. |
| Prize-out sensor error                                         | Detect during adjusting DIP SW2 J5 to 'ON'            | 1.Please check whether the sensitivity of electric drainage is too high or not?Please adjust VR and LED to be'dim' status.<br>2.Please check whether JS fall down or not?<br>3.Electric eye is error.<br>4.Main board is error.                             |
| Stop-front or stop-back SW error; motor of front or back error | 1.When machine start<br>2.When playing<br>3.Auto demo | 1. Check if stop-forward or stop-back SW is working well.<br>2. Check if the air-plug of crane set is well connected.<br>3. Check if the up-motor or down-motor is working well.<br>4. Mainboard error.                                                     |
| Stop-left SW error; motor of left or right error               | 1.When machine start<br>2.When playing<br>3.Auto demo | 1. Check if stop-left SW is working well.<br>2. Check if the air-plug of crane set is well connected.<br>3. Check if the left-motor or right-motor is working well.<br>4. Mainboard error.                                                                  |
| Coin 1 meter error or disconnected                             | Check anytime                                         | 1.Check if the J5 PIN is well connected.<br>2.Check if the meter is error or PIN is disconnected.<br>3.Mainboard error.                                                                                                                                     |
| Coin1 insert coin signal over 150mms                           | Check when coin insert                                | 1.Coin acceptor error.<br>2.Player is phishing.<br>(COIN1,COIN2 signal is less than 10mms, will not be confirmed to be a coin insert signal.)                                                                                                               |
| Coin2 insert coin signal over 150mms                           |                                                       |                                                                                                                                                                                                                                                             |
| PCB error                                                      | when machine starts                                   | Replace a new mainboard                                                                                                                                                                                                                                     |

## CHAPTER 4 WIRING DIAGRAM

### SECTION 1 MAINBOARD W170921

Host machine board CONNECTOR location plan

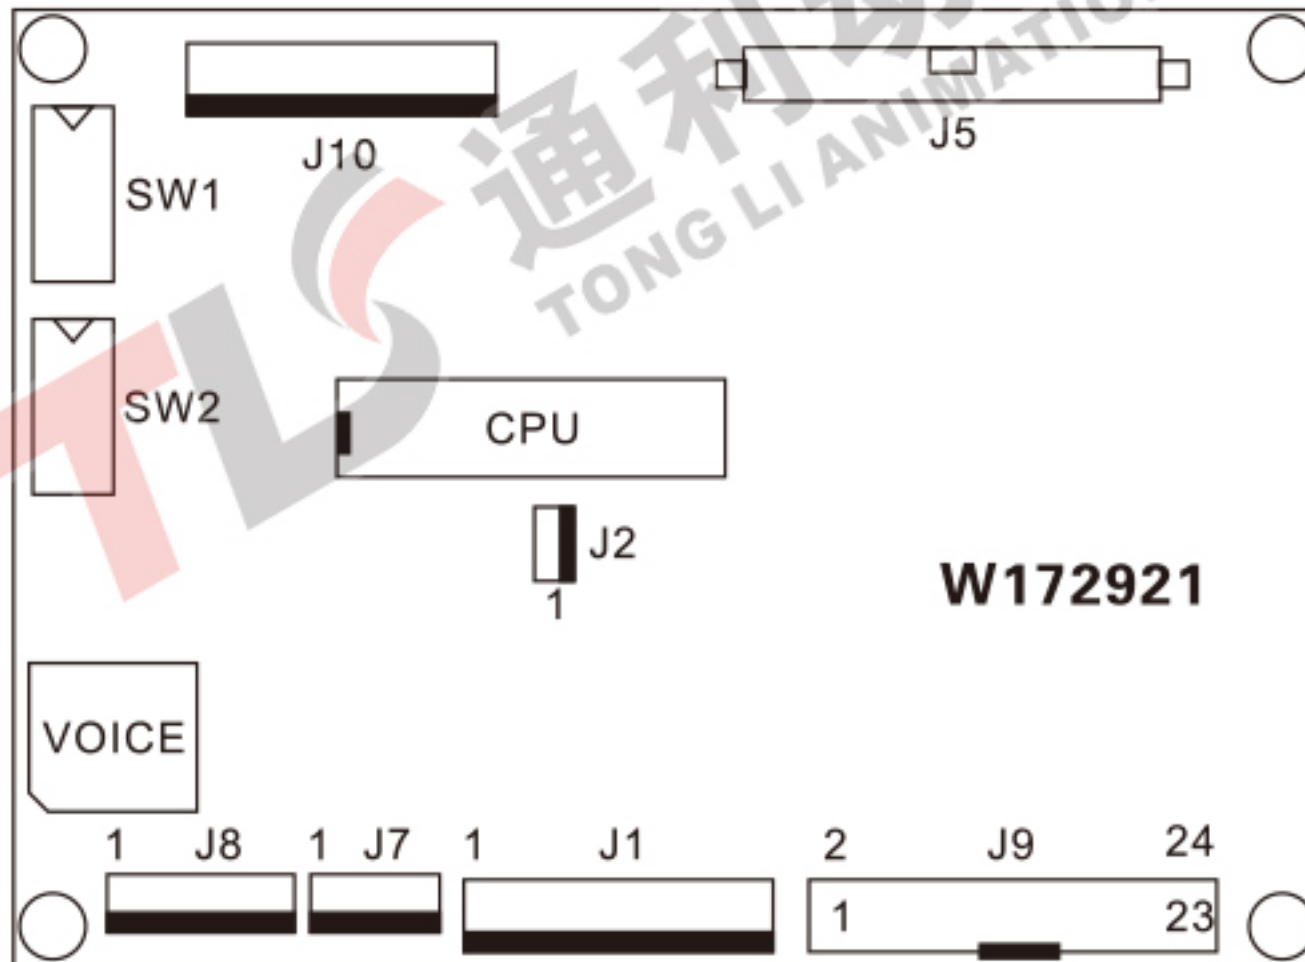

| W120206 J5 34PIN |                   |    |                    |
|------------------|-------------------|----|--------------------|
| 1                | X                 | 2  | X                  |
| 3                | X                 | 4  | X                  |
| 5                | X                 | 6  | X                  |
| 7                | X                 | 8  | X                  |
| 9                | X                 | 10 | X                  |
| 11               | X                 | 12 | X                  |
| 13               | Prize-out Meter   | 14 | X                  |
| 15               | X                 | 16 | Coin acceptor +12V |
| 17               | COIN 1 Meter      | 18 | X                  |
| 19               | +12               | 20 | COIN 1 Signal      |
| 21               | +12               | 22 | X                  |
| 23               | Descend light 12V | 24 | Coin acceptor GND  |
| 25               | Shaking Alarm     | 26 | SENSOR signal      |
| 27               | Test              | 28 | +12V sensor        |
| 29               | Joystick Forward  | 30 | GND sensor         |
| 31               | Joystick Left     | 32 | Joystick Back      |
| 33               | Descend Button    | 34 | Joystick Right     |

## CHAPTER 4 WIRING DIAGRAM

| W120206 J1 |      |  |
|------------|------|--|
| 1          | GND  |  |
| 2          | GND  |  |
| 3          | GND  |  |
| 4          | +5V  |  |
| 5          | +5V  |  |
| 6          | +12V |  |
| 7          | +12V |  |
| 8          | +24V |  |
| 9          | +24V |  |
| 10         | +48V |  |

| W120206 J9 |                       |  |    |                             |  |
|------------|-----------------------|--|----|-----------------------------|--|
| 1          | Claw+                 |  | 2  | X                           |  |
| 3          | Claw-                 |  | 4  | X                           |  |
| 5          | X                     |  | 6  | Stop-down SW NO             |  |
| 7          | X                     |  | 8  | Stop-up SW NC               |  |
| 9          | X                     |  | 10 | Stop-left NO                |  |
| 11         | X                     |  | 12 | Stop-front and stop-back NO |  |
| 13         | GND                   |  | 14 | GND                         |  |
| 15         | GND                   |  | 16 | GND                         |  |
| 17         | X                     |  | 18 | Left and right motor-       |  |
| 19         | X                     |  | 20 | Left and right motor+       |  |
| 21         | Front and back motor+ |  | 22 | Up and down motor-          |  |
| 23         | Front and back motor- |  | 24 | Up and down motor+          |  |

| W120206 J7 |           |       |
|------------|-----------|-------|
| 1          | Sound VR1 | 1K VR |
| 2          | Sound VR2 |       |
| 3          | Sound VR3 |       |
| 4          | SP-       |       |
| 5          | SP+       |       |

## CHAPTER 5 LCD DISPLAY WIRING DIAGRAM

LCD display 12864 (obverse) and PIN



LCD display 12864 pin details:

| J1 | Color           | PIN Name | Description                                                   | Instruction to connect with mainboard W170921 J10 |
|----|-----------------|----------|---------------------------------------------------------------|---------------------------------------------------|
| 1  | BLACK           | VSS      | Module Power GND                                              | Connect to mainboard J10 Pin 1                    |
| 2  | RED             | VDD      | Module Power Anode                                            | Connect to mainboard J10 Pin 2                    |
| 3  | BROWN           | VO       | LCD Driver Voltage Input                                      | Connect to mainboard J10 Pin 3                    |
| 4  | GREEN WHITE     | RS(CS)   | Parallel Order/ Data Select Signal, Serial Chip Select Signal | Connect to mainboard J10 Pin 4                    |
| 5  | PINK            | R/W(SID) | Parallel Read-write Selection Signal, Serial Data Port        | Connect to mainboard J10 Pin 5                    |
| 6  | YELLOW          | E(CLK)   | Parallel Enable Signal, Serial Digital Synchronometer         | Connect to mainboard J10 Pin 6                    |
| 7  | ORANGE          | DB0      | Data 0                                                        | Connect to mainboard J10 Pin 7                    |
| 8  | GREEN           | DB1      | Data 1                                                        | Connect to mainboard J10 Pin 8                    |
| 9  | DARK BLUE       | DB2      | Data 2                                                        | Connect to mainboard J10 Pin 9                    |
| 10 | PURPLE          | DB3      | Data 3                                                        | Connect to mainboard J10 Pin 10                   |
| 11 | GRAY            | DB4      | Data 4                                                        | Connect to mainboard J10 Pin 11                   |
| 12 | WHITE           | DB5      | Data 5                                                        | Connect to mainboard J10 Pin 12                   |
| 13 | BLACK WHITE     | DB6      | Data 6                                                        | Connect to mainboard J10 Pin 13                   |
| 14 | BROWN WHITE     | DB7      | Data 7                                                        | Connect to mainboard J10 Pin 14                   |
| 15 | SPARE PIN       | PSB      | Parallel/ Serial Port Select: H-Parallel, L-Serial            |                                                   |
| 16 | SPARE PIN       | NC       | Spare PIN                                                     |                                                   |
| 17 | SPARE PIN       | RET      | Reset, Low Level available                                    |                                                   |
| 18 | SPARE PIN       | NC       | Spare PIN                                                     |                                                   |
| 19 | DARK BLUE WHITE | LED_A    | Backlight Anode (LED+5V)                                      | Connect to mainboard J10 Pin 15                   |
| 20 | PURPLE WHITE    | LED_K    | Backlight Cathode (LED-0V)                                    | Connect to mainboard J10 Pin 16                   |

# MAINTENANCE

---

Dear Customers:

Thanks for your purchasing from Tong Li! We will constantly improve our quality and service, and provide you better quality, high-efficiency, professional products and after-sales service. For protect your legitimate rights and interests, please read this manual detail, and knowing our service content, if the products and accessories were broken without according to this manual, we will not responsible for warranty, and only provide products and accessories for value.

## 1. Guarantee term.

Guarantee period of crane machines electronic components is 12 months from the purchasing. (Base on the PI date.).

## 2. The situation without guarantee.

After you purchase this product, if the machines were broken by below reasons, we can not provide guarantee according to this term, and will provide you service for value.

- (1) The whole machine or the parts is over the guarantee period.
- (2) LCD monitor surface is scuffing, weeping, fracture by human error.
- (3) User breached this manual, install, keeping and use wrongly causes to broken.
- (4) Fixing by person without our company authentication, user fixed (Wrong operation, scuffing, knock mark by human error, water-dampness, supply improper voltage.) causing to broken.
- (5) No purchase and guarantee voucher.
- (6) Guarantee and purchase voucher are modified by human.
- (7) The model and number are not match with matter.
- (8) The machine broken due to using the accessories without our authentication
- (9) The machine broken due to natural disaster (earthquake, fire).

## 3. Service type.

- (1) Once the products are broken down, please notice to us at once.
- (2) Products breakdown maintenance, please must send the unserviceable component to us, and provide the related purchasing voucher.

## 4. Reminder

- (1) The accessories during the fixing are belong to our company.
- (2) The service for value is containing cost of labor and fixing material.

## 5. Service and support.

- (1) Please review our website [www.tonglianimation.com](http://www.tonglianimation.com) to get the latest information.
- (2) Technical support and after-service tel: 86-20-23885899

# Memo





Product name: MEOW MEOW HOUSE

Company name: Guangzhou Tong Li Animation Technology co.,ltd.

Address: H19 Startoon City, No.143 Yingxing East Road, Donghuan Street, Panyu, Guangzhou. China

Version: Ver1.0

All rights reserved, reproduction is prohibited.

